



Scheda unificata - Unified board

MACCHINE INTERESSATE MACHINES LIST	Miscelatore Water mixer	Abilitazione Programmazione Allowed programming	Interfaccia Computer Computer Interface Dip 4	J1	J2	Dip 1	Dip 2	Dip 3	Dip 4	CN1A	CN10 CN11
D92 A - SMART A 1,2,3 gr.	NO	NO	SI/YES	OFF	OFF	OFF	OFF	OFF	ON	-	ON
	NO	SI/YES	SI/YES	OFF	OFF	ON	OFF	OFF	ON	-	ON
D92 S - SMART S 1,2,3 gr.	NO	NO	NO	OFF	ON	OFF	OFF	OFF	OFF	-	ON
	SI/YES	SI/YES	SI/YES	ON	ON	ON	OFF	OFF	ON	□□	OFF
E61 A Jubilee (24V)	SI/YES	NO	SI/YES	ON	ON	OFF	OFF	OFF	ON	□□	OFF
	NO	SI/YES	SI/YES	ON	ON	ON	OFF	OFF	ON	-	OFF
	NO	NO	SI/YES	ON	ON	OFF	OFF	OFF	ON	-	OFF
	SI/YES	NO	SI/YES	OFF	ON	OFF	ON	OFF	ON	□□	ON
E91 A Ambassador 2,3,4 gr.	SI/YES	SI/YES	SI/YES	OFF	ON	ON	ON	OFF	ON	□□	ON
	NO	NO	SI/YES	OFF	ON	OFF	ON	OFF	ON	-	ON
	NO	SI/YES	SI/YES	OFF	ON	ON	ON	OFF	ON	-	ON
E91 S Ambassador 2,3,4 gr.	SI/YES	NO	NO	OFF	ON	ON	OFF	OFF	OFF	-	ON
	NO	NO	NO	OFF	ON	OFF	OFF	OFF	OFF	-	ON
E 91 S Diplomat 2,3,4 gr.	SI/YES	NO	NO	OFF	ON	ON	OFF	OFF	OFF	-	ON
	NO	NO	NO	OFF	ON	OFF	OFF	OFF	OFF	-	ON
E92 S Elite 2,3,4 gr.	SI/YES	NO	NO	OFF	ON	ON	OFF	OFF	OFF	-	ON
	NO	NO	NO	OFF	ON	OFF	OFF	OFF	OFF	-	ON
E97 A 2,3 gr.	NO	NO	SI/YES	OFF	OFF	OFF	OFF	OFF	ON	-	ON
	NO	SI/YES	SI/YES	OFF	OFF	ON	OFF	OFF	ON	-	ON
	SI/YES	NO	SI/YES	OFF	OFF	OFF	OFF	OFF	ON	■	ON
	SI/YES	SI/YES	SI/YES	OFF	OFF	ON	OFF	OFF	ON	■	ON
E97 A 4 gr.	SI/YES	NO	SI/YES	ON	OFF	OFF	OFF	OFF	ON	■	ON
	SI/YES	SI/YES	SI/YES	ON	OFF	ON	OFF	OFF	ON	■	ON
	NO	NO	SI/YES	ON	OFF	OFF	OFF	OFF	ON	-	ON
E97 S 2,3 gr.	NO	SI/YES	SI/YES	ON	OFF	ON	OFF	OFF	ON	-	ON
	NO	NO	NO	OFF	ON	OFF	OFF	OFF	OFF	-	ON
E98 A 1,2,3 gr.	NO	NO	SI/YES	OFF	OFF	OFF	OFF	OFF	ON	-	ON
	NO	SI/YES	SI/YES	OFF	OFF	ON	OFF	OFF	ON	-	ON
	SI/YES	NO	NO	OFF	OFF	OFF	OFF	OFF	OFF	■	ON
E98 A 2,3 gr. con termoiserva with thermoreserve	SI/YES	SI/YES	NO	OFF	OFF	ON	OFF	OFF	OFF	■	ON
	NO	NO	NO	OFF	OFF	OFF	ON	OFF	OFF	-	ON
	NO	SI/YES	NO	OFF	OFF	ON	ON	OFF	OFF	-	ON
E98 A 4 gr.	SI/YES	NO	SI/YES	ON	OFF	OFF	OFF	OFF	ON	■	ON
	SI/YES	SI/YES	SI/YES	ON	OFF	ON	OFF	OFF	ON	■	ON
	NO	NO	SI/YES	ON	OFF	OFF	OFF	OFF	ON	-	ON
	NO	SI/YES	SI/YES	ON	OFF	ON	OFF	OFF	ON	-	ON
E98 A 4 gr. con termoiserva with thermoreserve	NO	NO	NO	ON	OFF	OFF	ON	OFF	OFF	-	ON
	NO	SI/YES	NO	ON	OFF	ON	ON	OFF	OFF	-	ON
Stylema A - Stylema S 2,3 gr.	NO	NO	NO	OFF	OFF	OFF	OFF	ON	OFF	-	ON
	NO	SI/YES	NO	OFF	OFF	ON	OFF	ON	OFF	-	ON
	NO	SI/YES	SI/YES	OFF	OFF	ON	OFF	ON	ON	-	ON
	SI/YES	NO	SI/YES	OFF	OFF	OFF	OFF	ON	ON	□□	ON
	SI/YES	SI/YES	SI/YES	OFF	OFF	ON	OFF	ON	ON	□□	ON
	SI/YES	SI/YES	NO	OFF	OFF	ON	OFF	ON	OFF	□□	ON
Stylema A - Stylema S 2,3 gr. con termoiserva - with thermoreserve	NO	NO	NO	OFF	OFF	OFF	ON	ON	OFF	-	ON
	NO	SI/YES	NO	OFF	OFF	ON	ON	ON	OFF	-	ON
Stylema A (24V) 2,3 gr.	NO	NO	NO	OFF	OFF	OFF	OFF	ON	OFF	-	OFF <sup>1</sup>
	NO	SI/YES	NO	OFF	OFF	ON	OFF	ON	OFF	-	OFF <sup>1</sup>
	NO	SI/YES	SI/YES	OFF	OFF	ON	OFF	ON	ON	-	OFF <sup>1</sup>
	SI/YES	NO	SI/YES	OFF	OFF	OFF	OFF	ON	ON	□□	OFF <sup>1</sup>
	SI/YES	SI/YES	SI/YES	OFF	OFF	ON	OFF	ON	ON	□□	OFF <sup>1</sup>
	SI/YES	SI/YES	NO	OFF	OFF	ON	OFF	ON	OFF	□□	OFF <sup>1</sup>

■ CN1A: Collegare il cablaggio del pulsante erogazione acqua per miscelatore  
Connect the "water dispensing push-button" cable for water mixer

"□□": Jumper inserito  
Jumper inserted

"-": Jumper non previsto  
Not equipped with jumper

OFF<sup>1</sup>: negli alloggiamenti scheda "CN10" e "CN11" non ci deve essere nessun connettore  
"CN10" and "CN11" board seats have to be without any connector